


How to enable 4 monitors in one system with Quadro 400 NVS

Environment :


- MB : SuperMicro X5DAL-TG2 with BIOS: 1.2c
- CPU : Dual Intel Xeon 2.4GHz
- Memory : Transcend DDR-333 256MB X 2 pcs
- HDD : IBM IC35L080AVVA07-0 80GB
- CD-ROM : 52X
- Power Supply : ENERMAX 3in1 EG465P-VE 465W
- VGA : Quadro 400 NVS
- VGA BIOS : 4.17.20.13.16
- VGA driver : 6.14.10.5672 (download from nVidia)
- Monitors : 4 monitors all support resolution 1280X1024
- OS : English version Windows XP Professional + SP1a
- DirectX : 9.0b

Test Step by Step :


1. Install WinXP Pro and SP1a
2. Install Intel INF file : V5.1.1.1002
3. Install Quadro Driver : 6.14.10.5672
4. Install DirectX 9.0b , please see the below picture :

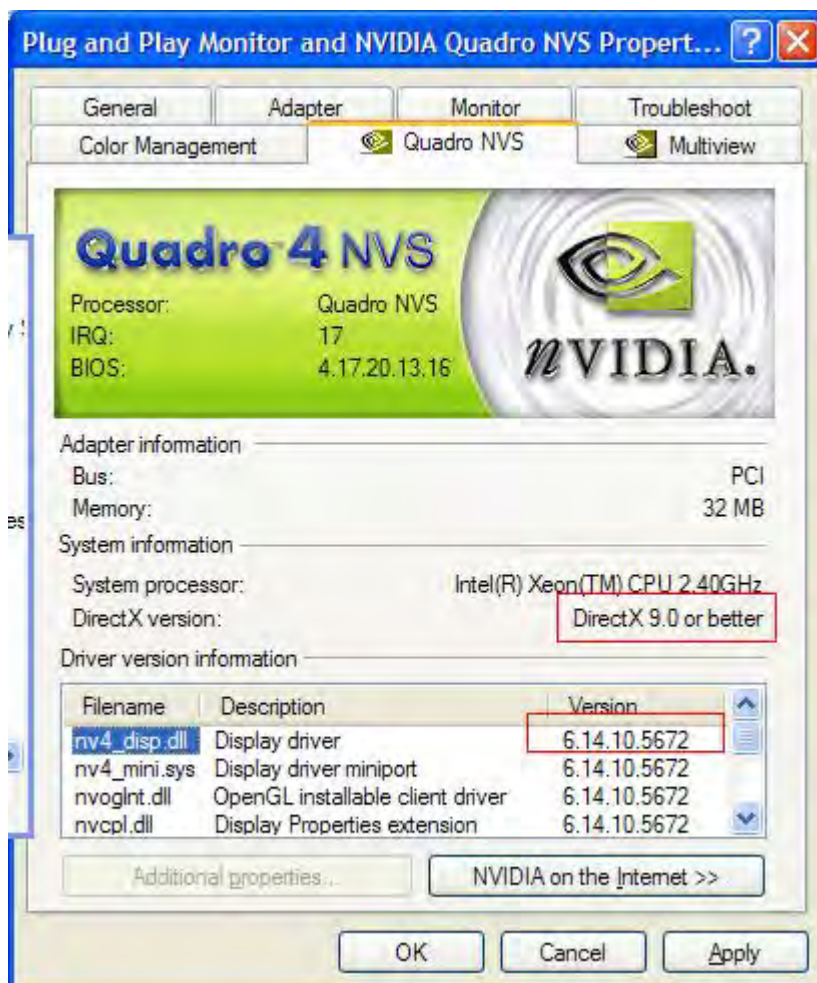


5. After rebooting the OS , go to Display Properties and Enable MultiView Mode function and System will prompt to reboot , press YES to restart the system , please reference below picture :

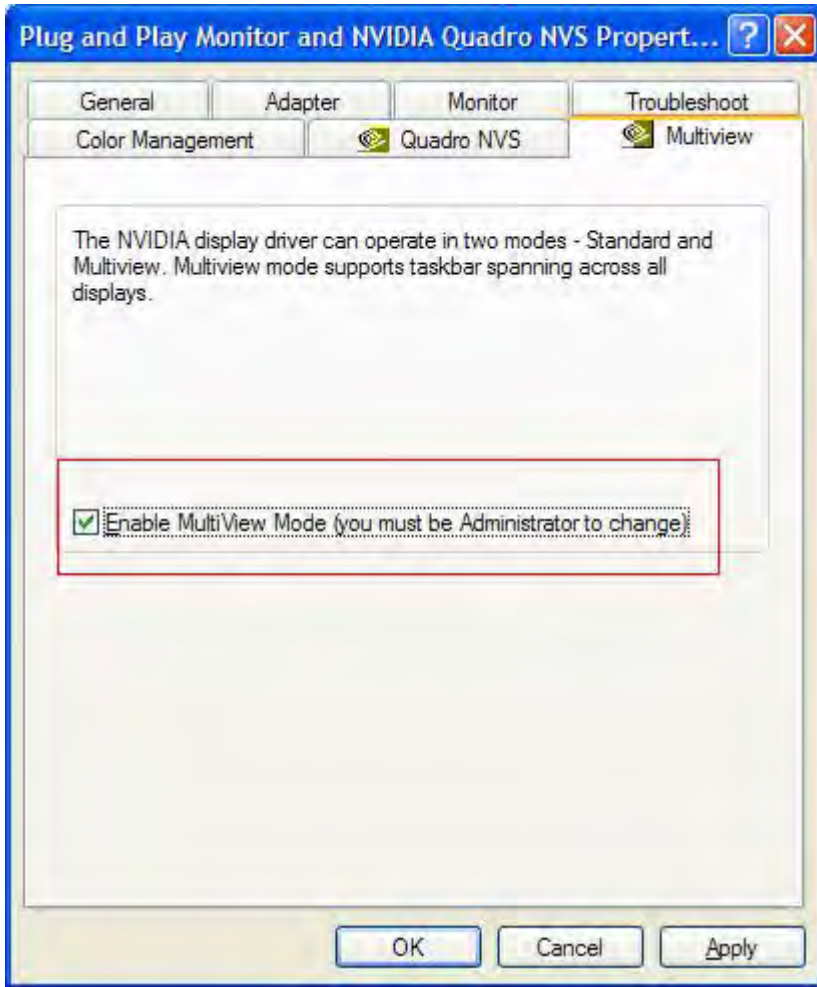

6. After rebooting the system , In "Multiview" function of Display Properties , you will get below picture , each monitor can be set to 1280X1024 :

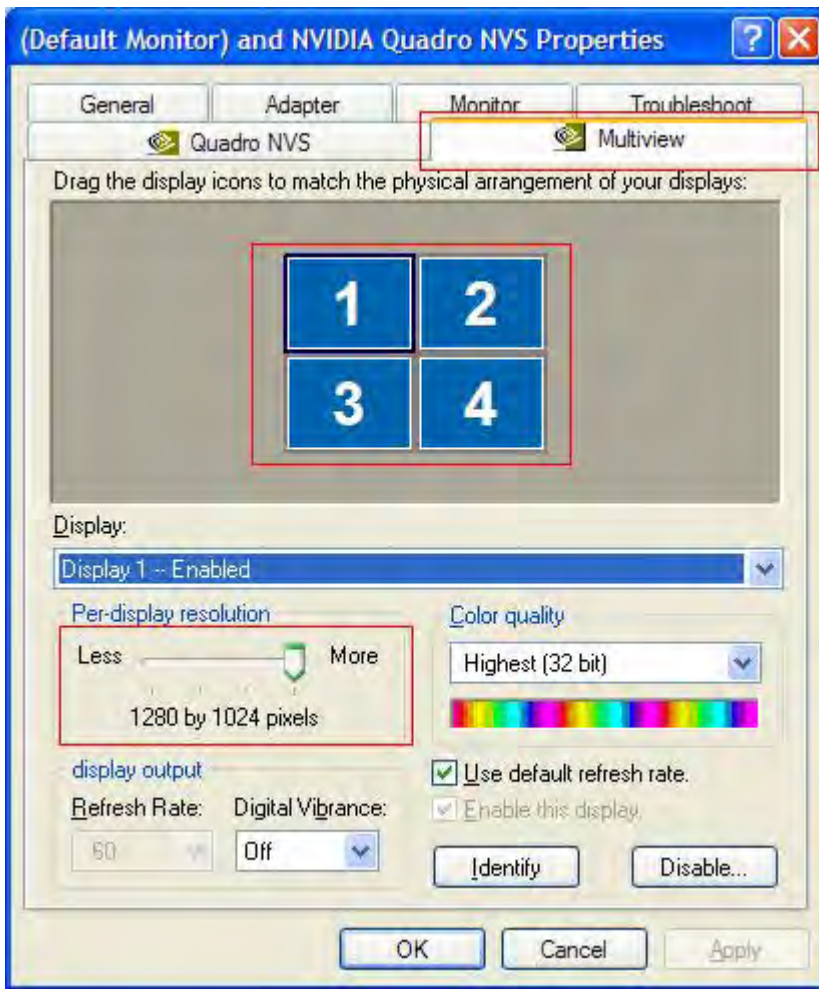

7. As each monitor set to resolution 1280X1024 , you will 2560X2048 under Display Properties , please see the below picture :

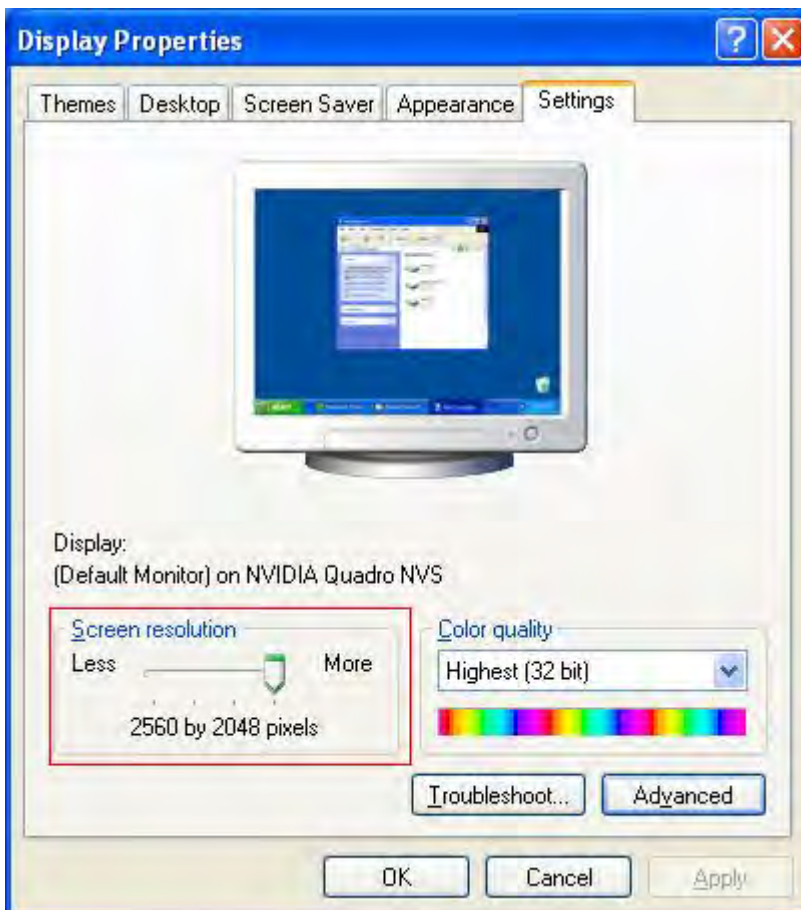

8. And you can display a photo up to resolution 2560X2048.