

SIP Configuration

Category : SMC / Configuration / General

Q: How to verify SIP connection mode for A/V transmission in NSC3615 (Peer-to-peer or SIP proxy)? How do I configure SIP connection mode on SMC?

SMC supports 2 modes of SIP connection, i.e. peer-to-peer or via SIP proxy. A SIP phone number shall be pre-configured before make the SIP call to IPCam server. For a peer-to-peer mode, the IP address of target IPCam shall be designated before launching IPCam connection.

If you are making an SIP proxy connection to IPCam server, make sure you have already configured SIP proxy setting of SMC itself. The SIP proxy setting can be modified from "Advance Setting" → "Other". Make sure "Using SIP Server" option is "ON".

You need to restart SMC to make the new SIP proxy setting to be effective.

