


Q: Why can't I hear any sound from my TV card in Windows Vista?

A: Please update your sound card driver to the latest version which supports Windows Vista. Then do the following procedures:

1. Make sure you have connected the audio cable from your TV card to "CD-in" on your mother board.
2. Open the Volume Mixer (see the following page) and select "Playback Devices" or "Recording Devices" setting.




3. Select "Recording Devices". In this page, right click to select "Show Disabled Devices".

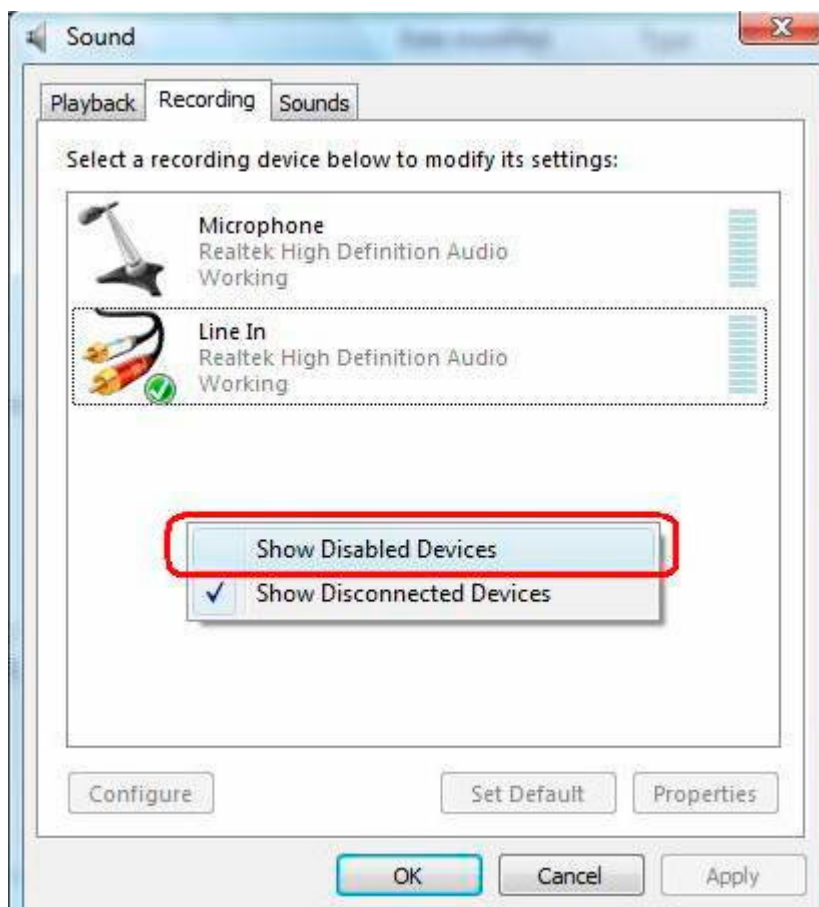

Then you can find many devices (ex. CD Audio, Stereo, or Aux)

4. Right click on "CD Audio" and enable it.

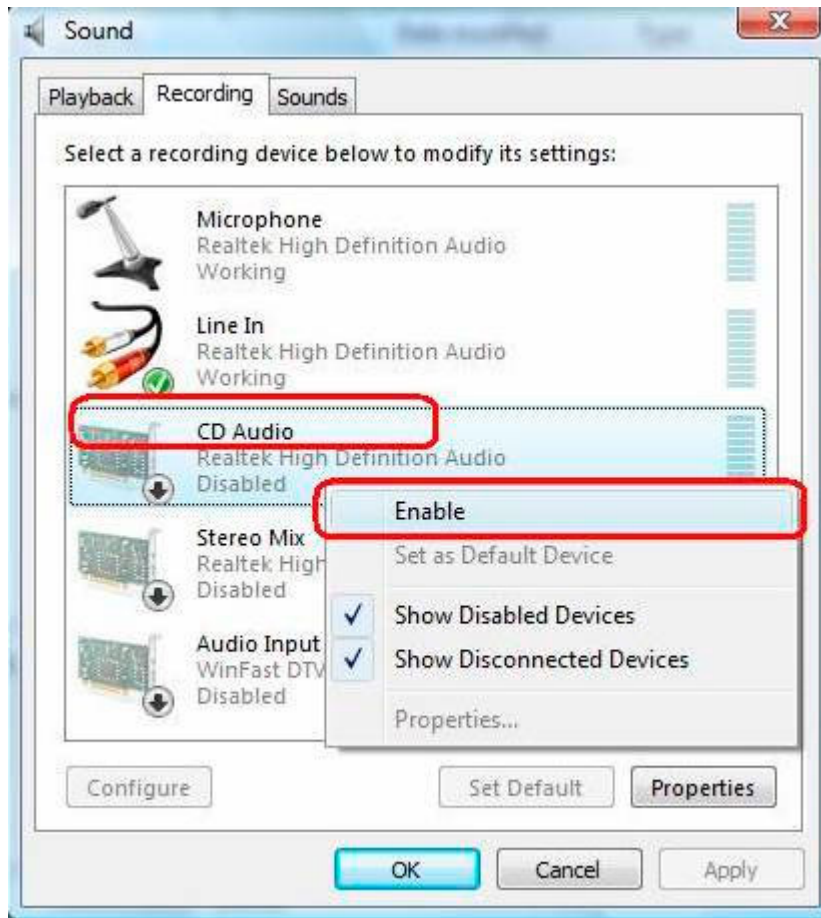

5. Run WinFast PVR2 and open the setting page.

- Select "CD Audio" in "Analog Audio Device" and you can record the audio of your TV programs.
- Select "Speakers" in "Playback Devices" and you will find all the options of "Audio-Out Control Line".
- Select "CD Audio" in "Audio-Out Control Line" and you can control playback volume in control panel.
- Select "CD Audio" in "Recording Devices" and you can control recording volume with slider on "Recording Volume".

Click OK to accept all settings.

